



KANDYPENS



By Kandypens - All rights reserved.

KANDYPENS

Post your memorable KandyPens Oculus
experiences on Facebook & Instagram!
Dont forget to include: #KandyPens & #Oculus

WARNING:

Before using, read this user manual of the Oculus Vaporizer to ensure correct usage through understanding.


Failure to follow operating instructions could result in injury or voiding the warranty.

2	FEATURES
2	WHAT' S INSIDE
4-7	OPERATION
8	PROTECTIONS
8-9	WARNING
9-10	WARRANTY & AFTER SALE SERVICE
11	LEGALITY


FEATURES

- Palm-Size Nectar Collector
- Sesh-Mode
- Quartz Crystal Atomizer
- Variable Voltage(3 settings)
- 500Mah Battery
- USB-C Charging Port
- Lifetime Warranty(Battery)
- Designed in the USA


WHAT'S INSIDE

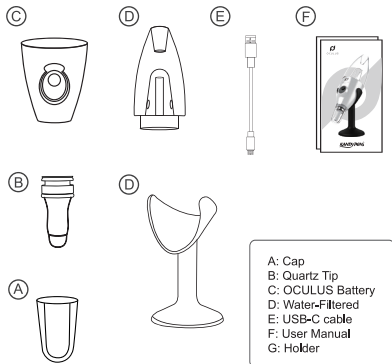


OPERATION

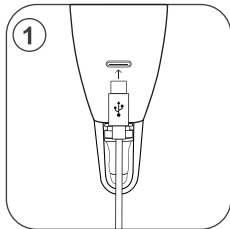


1. Full charged the device with type-c cable before first time use. It takes half an hour for full charging.

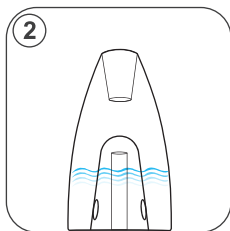


2. Fill the glass to the proper water level. Be sure to remove the plastic coil cover before installing / uninstalling the glass onto the base.

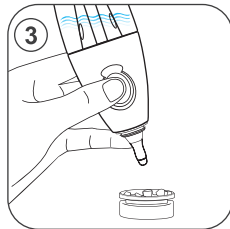


3. Prepare the content.

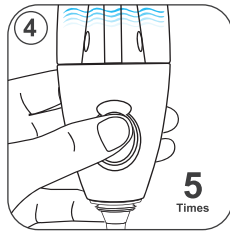

4. Press power button rapidly for 5 times to turn on/off. Press power button 2 times to preheat, it will run at 1.8V for 30 seconds with colorful lights on. In between, to deactivate preheat press button another 2 times.

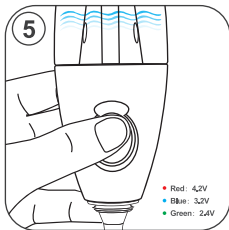

5. Press power button 3 times to get desired voltage setting. Green 2.4V Blue 3.2V Red 4.2V

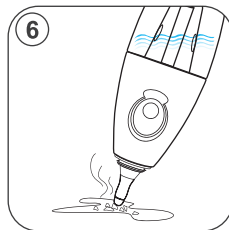

6. Dip directly and enjoy.

PROTECTIONS

- ① Overheat protection: When the device run out of the content, it will stop working and keep flashing 3 seconds. When the device is continuously used for more than 10 seconds, lights will flash 5 times and stop working.
- ② Short circuit protection: All lights will flash 3 times to indicate short circuit and will automatically shut off.
- ③ Low voltage protection: All lights will flash 10 times to indicate low voltage. The device will automatically stop working for protection.
- ④ Overcharge protection: When the device is full charged, it will automatically stop charging.

WARNING

- Do not overfill the cups.
- Several short inhales produce more vapor.
- After using, do not touch the heating chamber until it cools down.
- Keep away from moisture and high humidity.
- Store in a cool dark place when not in use.

Note: This product is designed for adult smokers. It should not be used by nonsmokers, or children under the age of their local smoking or vaping laws, women who are pregnant or breastfeeding, or persons with or at risk of heart disease, high blood pressure, hypertension, diabetes, or taking medicine for depression or asthma. Discontinue use and consult a physician if you experience misuses symptoms such as nausea, vomiting, dizziness, diarrhea, weakness and rapid heartbeat or hypertension.

UNDER WARRANTY & AFTER SALE SERVICE

KandyPens Oculus warranty keeps your device performing at its best, ensuring an optimal experience each time. When you encounter an issue, for your convenience. First, handle the after-sales service with local sellers where you ordered from, Kandypens have different distributors in different countries out of China and have authorized them the rights of that under certain rules. If further assistance after that, you are also welcome to consult with Kandypens team in USA, below are what you need to be noted:

1. Have more questions, send your email to support @kandypens.com or contact us at 1 (855) 526-3904 for direct contact with our customer support team.

2. KandyPens provides a lifetime warranty from the date of original retail purchase for the battery base and any defect in materials and workmanship. The warranty does not cover glass, atomizers, normal wear, and tear, or damage caused by accident or abuse.

3. You may be required to provide proof of purchase, and or the device itself when making a claim under this warranty. Taking KandyPens Oculus base apart or attempting to repair it will immediately void the warranty of the product.

4. Call charges and international shipping charges may apply, depending on the location. Subject to the full terms and detailed information listed on Kandypens website under local consumer laws.

LEGALITY

Kandypens products, strictly use as intended. Kandypens units should be used only by persons of legal smoking age in congruence with local, state, or federal law. Kandypens reserves the right to verify the age of the consumer prior to every purchase.

- Registered Kandypens products are not intended for any use which is illegal under any local, state or federal law. Besides, Kandypens products are not intended to diagnose, prevent, treat, or cure any disease or medical condition. If you are pregnant, nursing, taking medication for a medical condition, or suspect you have a medical condition, please consult your physician before using any Kandypens products.

We value your feedback.

Write us a review on

